

CONQUER THE ELEMENTS

FORGE

HANDHELD USER MANUAL



**F4
TECH**

Table of Contents

Chapter 1.....	6
Getting Started	6
Identifying Hardware Components	6
Front of Device	6
Keypad	8
Top View	9
Back of Device.....	9
Base.....	10
Preparing your Device	11
Installing the Battery and SIM Card (select models)	11
Connecting to A/C Power/Charging the Battery.....	13
Initial Startup	14
Syncing Device to Your PC	14
Installing ActiveSync and WMDC	15
User Options	16
Using the MicroSD card	16
Using the Ultrasonic Ranging Module.....	17
Chapter 2.....	17
The Basics.....	17
Powering On/Off.....	17
Power Saving	17
Turning the backlight on/off	17
Suspend Mode.....	18
On-Screen Navigation.....	18
Using the Stylus	18
Home Screen.....	19
Portrait/Landscape View.....	20
Navigation Bar	20
Tool Bar	20
Programs	20
Notifications.....	21
Entering Information Into Your Device.....	21

Writing on the Screen	22
Drawing on the Screen.....	22
Recording a Message	23
Securing Your Device.....	24
Securing Your Device with a Password.....	24
Chapter 3.....	25
Device Management	25
Power Management	25
Low Battery Signals/Actions	25
Power-Saving Tips.....	26
Customizing Your Device.....	27
Chapter 4.....	28
Microsoft Pocket Outlook.....	28
Calendar: Scheduling Appointments and Meetings.....	28
Creating an Appointment.....	29
Using the Calendar Summary Screen	29
Contacts: Tracking Friends and Colleagues.....	30
Creating a Contact.....	30
Tasks: Keeping a To-Do List.....	30
Creating a Task	30
Notes: Capturing Thoughts and Ideas	31
Creating a Note	31
Email: Sending and Receiving Email Messages.....	31
Synchronizing Email Messages	31
Connecting Directly to an Email Server	32
Using the Message List.....	32
Composing /Sending an Email.....	32
Managing Email Messages and Folders.....	33
Chapter 5.....	34
More Programs.....	34
ActiveSync/WMDC.....	34
Synchronizing Data.....	35
Office Mobile.....	35

Creating an Office File.....	36
Opening an Office File.....	36
Internet Explorer	37
Browsing the Internet.....	37
Windows Live Messenger.....	38
Setting up Windows Live.....	39
Signing into Messenger.....	39
Windows Media Player.....	39
Pictures & Videos	40
Viewing Pictures & Videos.....	40
Camera	41
Taking Pictures	41
Recording Video Clips.....	42
Geotagging.....	43
Chapter 6.....	45
Getting Connected	45
Types of Connections	45
Setting up a Cellular (HSDPA) Connection.....	45
Searching and Organizing Information.....	47
Remote Desktop.....	47
Setting up a Dial-up Connection.....	48
Using a Wireless Network	48
Switching On or Off the Wi-Fi Radio.....	48
Using Bluetooth	50
Switching On or Off the Bluetooth.....	51
Sending Files Via Bluetooth	52
Receiving Files Via Bluetooth	53
Creating a Bluetooth Partnership	53
Chapter 7.....	54
GeoAssist Software.....	54
Starting GeoAssist	54
GeoAssist Settings	55
GPS Tab.....	55

Satellite Detail Tab	56
Use Mode Tab.....	57
Log Tab.....	59
About Tab	59
Chapter 8.....	60
Recommended Settings.....	60
GPS Settings and Best Practices	60
Handheld and Best Practices.....	60
Chapter 9.....	61
Troubleshooting & Maintenance	61
Resetting Your Device.....	61
Restoring Device to Factory Settings.....	62
Troubleshooting.....	63
Caring for Your Device.....	65
Chapter 10.....	66
Safety Precautions.....	66
About Charging.....	66
About the Charger.....	66
About the Battery	67
FCC Warning	67

Chapter 1


Getting Started

Identifying Hardware Components

Front of Device



Ref	Component	Description
1.	LED1 Indicator	LED1: System Notification and Battery Status Indication
		Blinking Green displays charging battery
		Solid Green displays full battery
		Blinking Red displays low battery
		Solid Red displays faulty battery
		Alternating Green and Amber displays charging battery with Windows notifications
		Alternating Red and Amber displays low battery with Windows notifications
		Alternating Amber and Green displays full battery with Windows notifications
		Alternating Amber and Red displays faulty battery with Windows notifications
2.	LED2 Indicator	LED2: Status Indication for Integrated Module
3.	Touch Screen	Video display that responds to finger taps and gestures
4.	Microphone	Voice recorder
5.	Reset	Resets the device
6.	Keypad	See “Keypad” section for details

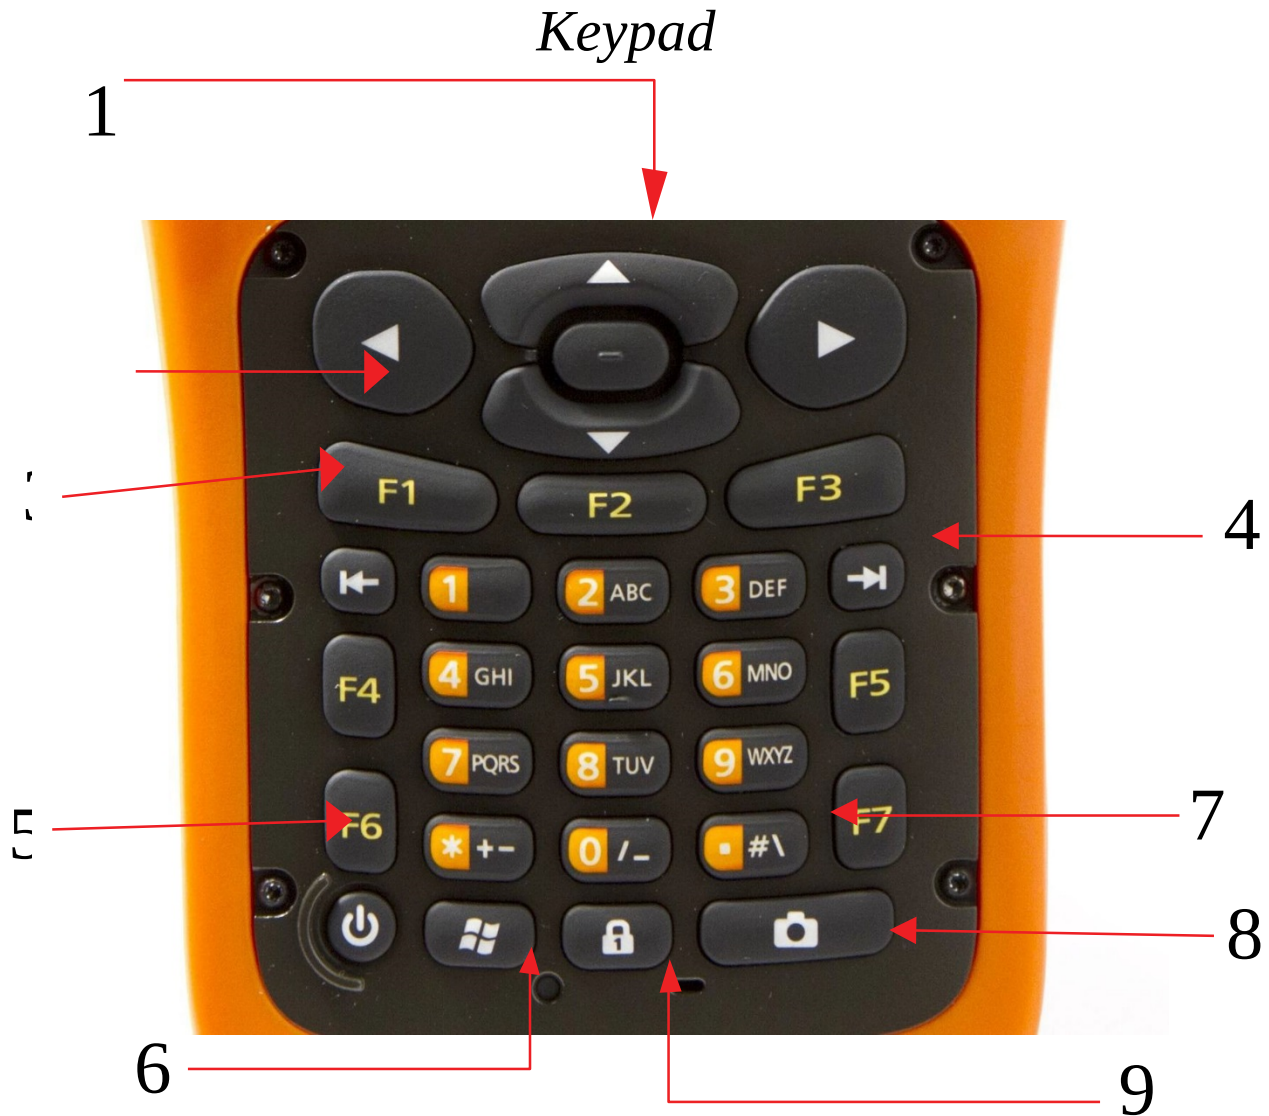

Ref	Component	Description
1.	Navigation Button	Navigates options in 4 directions, center button selects option
2.	Function Keys	F1 ~ F7 Function keys are multi-purpose keys that perform functions defined by individual API
3.	Back Tab Key	Backspace key
4.	Front Tab Key	Forward delete key
5.	Power Button	Turns device on and off
6.	Start Menu	Opens Start Menu
7.	Numeric Keys	12 key numeric keys is embedded in the typewriter keys
8.	Camera Button	Press to take a photo
9.	Num Lock	Pressing this key toggles the Num Lock on and off. When on, the Num Lock activates the numeric keys

Top View



Back of Device



Top View/Back of Device

	Component	Description
1.	Ultrasonic Cover	Covers and protects ultrasonic
2.	Hand Strap hole	Install hand strap
3.	LED flash light	Flashlight
4.	Camera	Takes pictures and records video
5.	Stylus	Used to input information and select options on the touch screen
6.	External GPS Antenna	Allows for use of optional external antenna. Antenna may be placed on top of a vehicle/building to gain greater reception
7.	Speaker	Plays music, sounds and voices
8.	Battery Cover Screw	Locks the battery cover
9.	Battery Cover	Covers and protects battery

Base



Ref	Component	Description
1.	Power Connector	Allows for battery charging through an A/C adapter
2.	USB OTG (Host & Client) Connector	Allows for USB connection
3.	UART(RS232) Connector	Connects to a RS232 device

Preparing your Device

Installing the Battery and SIM Card (select models)

- 1 Detach the battery cover from device



2. If your model has the 3.5G capability, you will need to install the SIM card provided by your mobile provider and insert the SIM card into the slot, then push to lock.



3. To remove the SIM card, slide to open, then remove card.
4. To install the battery, insert the connector side of the battery first, then secure the connection.



5. Attach the battery cover to the device.

Connecting to A/C Power/Charging the Battery

- Fully charge battery before initial use of your device
- Connect the converter to the A/C charger.
- The LED indicator will blink green when the battery is charging. Do not disconnect your device from A/C power until the battery is fully charged. This may take a couple of hours.

For Optimal Performance:

- Only use the included A/C charger.
- The lithium battery does NOT need to be fully discharged before next charging.
- Do NOT charge the battery in high temperatures (i.e. direct sunlight).
- The battery MUST be fully charged at least once every two weeks even if the device is not in use. Over-discharge of the battery creates negative battery performance.
- The battery will also charge if the device is connected via USB to a computer.

Initial Startup

- Connect the device to A/C power or make sure the battery has been fully charged.
- Turn on device by pressing the Power button.
- Select the language you prefer to use.
- Follow the Setup Wizard's on screen instructions.
 - o If a SIM card has been inserted and the 3.5G network provider has set the PIN, you will be prompted to enter PIN.
 - o Once Setup is complete, the Home screen will appear. The device is now ready for use.

Syncing Device to Your PC

Your device can connect and synchronize data with a Windows-based computer through ActiveSync and Windows Mobile Device Center (WMDC). ActiveSync is compatible with Windows XP. WMDC is only compatible with Windows Vista or Windows.

ActiveSync and WMDC act as gateways between your device and your computer. They allow for transferring Outlook email, appointments, contacts, and tasks as well as media (i.e. pictures, music, and videos).

Installing ActiveSync and WMDC

- Before installation, make sure Microsoft Outlook is installed on your computer.
- Be sure to install ActiveSync or Windows Mobile Device Center **before** connecting to your device.
- For Windows XP, download and install ActiveSync.
- For Windows Vista or Windows 7, download and install Windows Mobile Device Center. Visit the Microsoft website to download the program and to obtain operating instructions: <http://www.microsoft.com>.
- ActiveSync connection problems may occur in some cases. Likely causes include:
 - Interoperability with firewall applications
 - Network management applications
 - For troubleshooting information, visit the Microsoft website: <http://www.microsoft.com>.
- After software installation is complete, connect your device to your computer via the USB cable. The device is now ready to be synchronized.

User Options

Using the MicroSD card

The device supports micro Secure Digital (microSD). Use the following steps to insert a microSD card:

- Detach the battery cover from device.
- Remove the battery.
- Insert the card into the slot.
- Re-insert the battery.
- Re-attach the battery cover to device.

Make sure the microSD card slot is free of debris and always store microSD card in a protective case to avoid heat, dust, & humidity.



Using the Ultrasonic Ranging Module

This device supports the Ultrasonic Ranging Module. For additional product information, please contact your reseller or an authorized service provider.

Chapter 2

The Basics

Powering On/Off

To turn off the device, hold down the power button; the device will display a 3 second countdown notification, then power off.

Power Saving

Turning the backlight on/off

- The touchscreen's backlight dims after inactivity. By default, the touchscreen will dim after 30 seconds of activity on battery power.
- While connected to A/C charger, the touchscreen will dim after 1 minute of activity.
- To restore the backlight, either double tap the touchscreen or press any button.

Suspend Mode

- The device sets itself into suspend mode after inactivity. By default, the device will set itself into suspend mode after 3 minutes of inactivity on battery power.
- The device will set itself into suspend mode after 5 minutes of inactivity while connected to A/C power.
- To manually set the device into suspend mode, briefly press the power button.
- To resume operation, press the power button.

On-Screen Navigation

Using the Stylus

This tool is used to navigate the device's touchscreen. The stylus is located at the device's left side; remove from slot for use.

Tap

To open items and select options, touch the screen once with the stylus.

Drag

To drag text and images across the screen, tap, hold, and drag text or image. Lists and multiple items can also be selected and moved.

Tap and Hold

Tap and hold the stylus on an item to view a shortcut menu of available options. From the shortcut menu, select preferred option.

Home Screen

- When the device is turned on, the default screen is the Home screen.
- The Home screen can be accessed by tapping:  and then Home.
- The Home screen displays upcoming appointments, active tasks, email messages and notifications, and more. If a section of the Home screen is tapped, the associated program will open.



Portrait/Landscape View

To change the view preference, tap: Settings/System/Screen/General/then select “Landscape” or “Portrait”.

Navigation Bar

The navigation bar is located at the top of the screen. It displays active programs and tools, such as: volume, battery, time, connectivity, and more. Tap the navigation bar to setup related items.

Navigation Bar:



Tool Bar

The toolbar is located at the bottom of the screen, including options such as an onscreen keyboard and the Menu button.

Tool Bar:



Programs

To switch from one program to another without closing other programs, tap:  to open the Start menu.

All available programs can be accessed through the Start menu.

Notifications

The device has a variety of reminder notifications, such as: calendar appointments, tasks, alarm clock, etc. Notifications types include the following:

- A screen message
- A sound, which can be changed or specified
- The notification flashes in amber

To specify and choose reminder types and sounds, tap:

 /Settings/Sounds & Notifications.

Entering Information into Your Device

Text can be entered by:

- Using the onscreen keyboard
- Using the handwriting recognizer

To show or hide the onscreen keyboard, tap:  . The soft keyboard appears by default.

To change input modes, tap and hold:  , and select “preferred mode” from the popup menu.

- When using the onscreen keyboard, the device auto-detects words that are being typed.
- Tap on the displayed word to insert it.

Writing on the Screen


In programs that accept writing, such as Notes, a stylus can be used to write onto the screen. Writing can be edited and formatted into text later.

To write on the screen, tap:  /Draw to switch to drawing mode.

Drawing on the Screen

Pictures, diagrams, charts, etc. can be drawn onto the screen using the same input method for writing text:

1. Tap:  /Draw to enter drawing mode.
2. To draw, cross 3 ruled lines on first stroke; a drawing box should appear.
3. Any strokes or marks made within the guidelines will become part of the drawing.
4. Drawings that do not cross three ruled lines will be treated as writing.

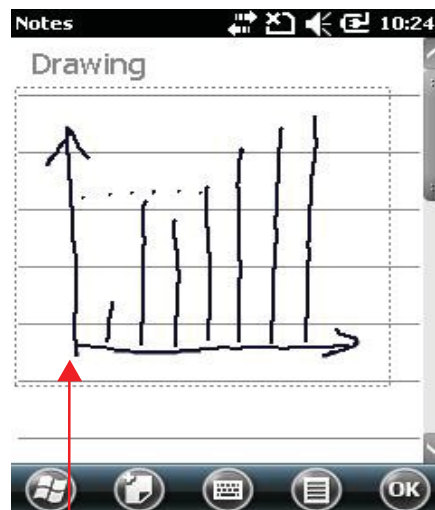


Drawing Box

Recording a Message

This device has the capability to record messages. Located in the “Notes” program, a stand-alone recording can be created with the note.

To create a recording:

- Tap:  /Notes to open the program
- Tap:  /View Recording Toolbar
- Place the device’s microphone near your mouth or the source of the sound.
- Tap the “Record” button on the Recording toolbar to begin recording.
- To stop recording, tap the “Stop” button on the Recording toolbar. The new recording will appear in the note list or as an embedded icon. To play a recording, select the recording in the list or tap its icon in the note.

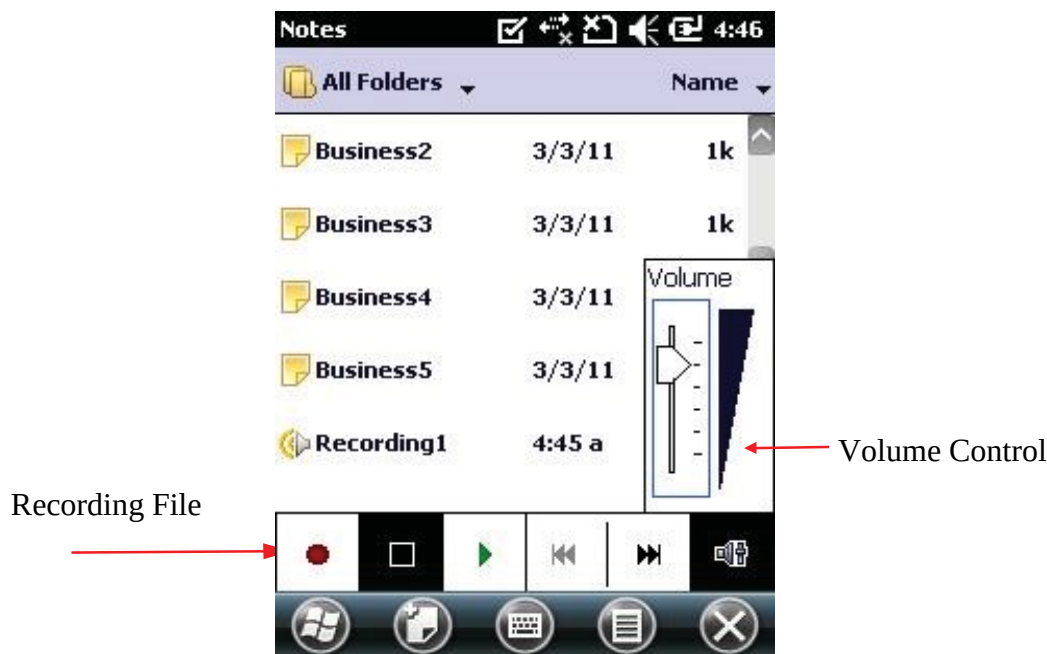

Securing Your Device

Locking Your Device

Your device can be locked when not in use. This prevents accidental/undesired operation of the touchpad or keypad.

To lock the device:

- Tap: Device Unlocked on the Home screen

To unlock the device:

- Tap:  /Unlock



Securing Your Device with a Password

To keep data secure, a password can be assigned to be inputted each time the device is turned on.

- Tap:  /Settings/Lock
- Tap to select prompt if phone unused for. In the box to the right, select a desired period of time.
- Select password type.
- Enter desired password. Confirm the password.
- Tap “OK” to save the settings.
- If the password is forgotten, the memory must be cleared before accessing the device.

Chapter 3

Device Management

Power Management

A fully charged battery should supply power for approximately 8 hours. Operation time will vary depending on usage of the device. Continuous multimedia operation or micro SD card operation will decrease the battery's power supply.

Low Battery Signals/Actions

- The battery should be charged for at least 30 minutes if the device displays a warning of low power. Failure to do so may result in insufficient battery power for operation.
- Battery power can be monitored by tapping:
 /Settings/System/Power
- The available remaining power is displayed on a status bar in the “Power” control panel.
- When the battery is low, a warning message will appear.
- As a precaution, all data should be saved and the battery should be recharged immediately via A/C power or USB power.
- Failure to do so may result in data loss.

Power-Saving Tips

The following describes how to maximize the, battery power and operation time.

- Set the device to suspended mode when not in use. By default, the screen will automatically dim. When the device has remained in idle mode for an extended period of time, the device will automatically go into suspend mode.
- The idle time required before the device goes into suspend mode can be adjusted by tapping:
 /Settings/System/Power/Advanced
- The device can also be set into suspended via the Power button.
- Disable functions and features you don't intend on using.
- Decrease the volume.
- Disable unused or unnecessary sounds and lights.
- Keep only the most necessary sounds and lights. These settings can be adjusted by tapping:
 /Settings/Sounds & Notifications
- Avoid power-consuming operations such as: using a modem or other peripheral, multimedia playback and recording, and using or monitoring wireless network signals.

Customizing Your Device

You can customize the settings of the device to your own preferences by tapping: /Settings.

The items you can customize are described as follows:

Items	Description
Bluetooth	To set up or change the Bluetooth connection.
Clock & Alarms	To change the time, date, and alarms.
Home	To select the information, theme, and background to be displayed on the Home screen.
Lock	To set a security password.
Sounds & Notifications	To change the settings for the system's sounds, volume, and notifications.
Connections	Connections To set up or change connection information.
	Domain Enroll To connect the device with company resources. An enrollment password should be provided by the company's system administrator.
	Beam mode To enable to receive incoming files.
	USB to PC To adjust settings for the type of USB connection and to enable advanced network functionality.
	Wi-Fi To configure the wireless network module.
Personal	Buttons To assign hardware buttons to specific programs and to adjust sensitivity levels of the buttons, i.e. repetition rate of scroll.
	Owner Information To enter personal information.

Chapter 4


Microsoft Pocket Outlook

Microsoft Pocket Outlook includes Calendar, Contacts, Tasks, Notes, and Messaging. These programs can be used individually or together. For detailed information on using Microsoft programs, tap:  /Help.

Calendar: Scheduling Appointments and Meetings

Use Calendar to schedule appointments, including meetings and other events. Appointments can be viewed as Agenda, Day, Week, Month, or Year. Notifications can be set as reminders for appointments. Appointments can also be displayed on the Home screen. Tap:  /Calendar to access the program.

Tap to access

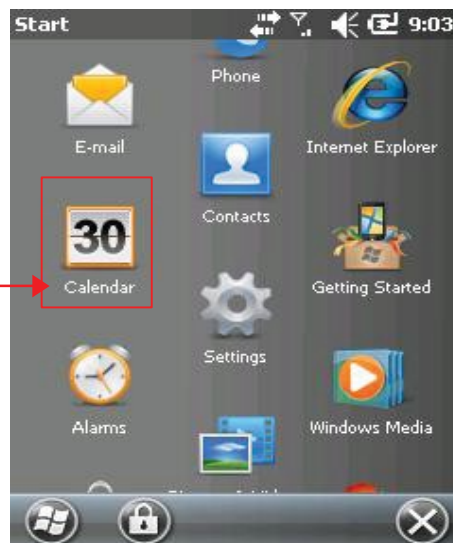

Creating an Appointment

- In “Day” or “Week” view, tap the desired date and time for the appointment.
- Tap: /New Appointment
- Using the Onscreen Keyboard, tap first to select the field, and then enter a description and location.
- If needed, tap the date and time to change them.
- Enter other desired information. You will need to hide the Onscreen Keyboard to see all available fields.
- Tap “ok” to save and return to Calendar.



Tap to add new

Using the Calendar Summary Screen

When you tap an appointment Calendar, a summary screen is displayed. To change the appointment, tap /Edit.

Contacts: Tracking Friends and Colleagues

- Contacts maintains a list of friends and colleagues. Tap:  /Contacts for access.
- For model with the 3.5G connection function, contacts stored in the SIM card will also appear in the list.
- They are indicated by the icon.

Creating a Contact

- In contacts, tap: 
- For model with the 3.5G connection function: Outlook or SIM contact should be selected.
- Using the Onscreen Keyboard, enter a contact's information. Scroll to view all available fields.
- Tap "ok" to save and return to contact list.
- When a contact in the contact list is tapped, a summary screen is displayed.

Tasks: Keeping a To-Do List

Use Tasks to create a To-Do list. Tap  /Tasks to access.

Creating a Task

- In "Tasks", tap:  /New Task
- Using the Onscreen Keyboard, enter a description.
- Enter a start date and due date, or enter other information by first tapping the field. Hide the Onscreen Keyboard to view all available fields.
- Tap "OK" to save and return to the task list.
- A summary of a task appears when it is tapped. To change the task, tap: .

Notes: Capturing Thoughts and Ideas

Reminders, thoughts, ideas, drawings, etc. can be quickly jotted with Notes. A note can be a written note, an audio recording, or a written note with an audio recording. Tap:  /Notes to open the program.

Creating a Note

- In “Notes”, tap: .
- Create a note by writing, drawing, typing, or recording.
- Tap “OK” to save and return to the note list.

Email: Sending and Receiving Email Messages

The email program can be used to send and receive email messages in two ways:

- Sync the device with Microsoft Exchange or Outlook on a computer.
- Connect directly to an email server through an Internet Service Provider (ISP) or a network.
- Tap:  /Email to access the program.

Synchronizing Email Messages

- Email messages can be synchronized as part of the general synchronization process.
- Enable “Inbox synchronization in ActiveSync/Windows Mobile Device Center”. For information on enabling Inbox synchronization, see “ActiveSync/Windows Mobile Device Center Help” on the desktop computer.

Connecting Directly to an Email Server

Email messages can be sent and received by connecting to a POP3 or IMAP4 email server through an ISP or local area network. Multiple email services can be used to receive messages. To use multiple email services, each email service needs to be set up and named.

Using the Message List

Received messages are displayed in the message list. Tap a message to open it. By default, when the device is synchronized with a desktop computer or a server, only messages from the previous three days and only the first 2 kb will be synced with the device. Attachments will not be synced with the device. The original messages will remain on the desktop computer.

Messages can be marked so that the device will retrieve the messages in full during the next synchronization or email server connection. To do so, tap and hold the desired message to retrieve from the message list. On the shortcut menu, tap Download Message. An icon will appear in the Inbox message list to display the message status.

Composing /Sending an Email

- Select the account in “Email”.
- In the message list, tap: /New.
- In the “To” field, enter an email address of one or more recipients, separating them with a semicolon. If the address is already in the contact list, tap “To” to select the email address.
- Enter message.

- To check spelling, tap: /Spell Check.
- To attach a file to the message, tap: /Insert and select the desired file.
- Tap "Send" when complete. If working offline, the message is moved to the Outbox folder and is sent the next time the device is connected to a server or a desktop computer.
- Messages in the Outbox folder will be delivered in one of two ways:
 - o The message is transferred to the Outbox folder in Exchange or Outlook upon next synchronization.
 - o The message is transferred to the email server upon connection.

Managing Email Messages and Folders

Each email service account has its own folder hierarchy with five default folders: Inbox, Outbox, Deleted Items, Drafts, and Sent Items. The messages received and sent through the mail service are stored in these folders. Additional folders can be created within each hierarchy. To create folders, tap: /tools/Manage Folders. The "Deleted Items" folder contains messages that have been deleted on the device. The behavior of the "Deleted" and "Sent Items" folders depends on the chosen options.

Chapter 5

More Programs

This chapter overviews other programs built into the device and how to use the programs. For detailed information on using Microsoft programs, tap: /Help.

ActiveSync/WMDC

ActiveSync on the device works with ActiveSync on a Windows XP computer and with Windows Mobile Device Center (WMDC) on a Windows Vista/Windows 7 computer.

When a connection is established between the device and a computer, information can be synchronized on the device and the computer with ActiveSync or WMDC. Synchronization compares the data on both the device and the computer and updates both systems with the most recent information.

For example: Outlook Contacts, Calendar and Tasks databases on the device can be kept up to date by synchronizing the device with Microsoft Outlook data on the computer.

Synchronize email messages in the device Outlook Inbox with email messages in Microsoft Outlook on the computer.

Synchronize Microsoft Word, Excel, and PowerPoint files between the device and the computer. Files are automatically converted to the correct format.

There are options to control which information types are synchronized and how much data is synchronized.

ActiveSync can also:

- Copy (not synchronize) files between the device and computer.
- Add and remove programs on the device.
- Pass through the computer to a network or the Internet.

Synchronizing Data

Once synchronization set is complete, data can be synchronized between the device and the computer.

To synchronize data:

- Connect the device to computer
- On the device, tap:  /ActiveSync
- Tap “Sync” to begin synchronization

Office Mobile

Microsoft Office Mobile works with Microsoft Office on the computer to give easy access to copies of office documentation. Tap:  /Office Mobile 2010 and select program.

- Excel Mobile 2010
- OneNote Mobile 2010
- PowerPoint 2010
- SharePoint WorkSpace Mobile 2010
- Word Mobile 2010



Creating an Office File

- Tap /Office Mobile and select program.
- Enter the information.
- After entering the information, tap “OK”. The file is automatically saved and named according to the first characters of text entered in the file.
- PowerPoint presentations on the device cannot be created or edited.

Opening an Office File

Upon opening an Office Mobile program, a file list will appear. Tap a file to open it. Only one file may be opened at the time. If a second file is opened, the first file will be saved and closed automatically.

If the HSDPA connection requires manual setup, you must obtain the specific settings from the cellular service provider and do the following:

- Tap /Settings/Connections/Connections
- In either group, tap “Add a New Modem Connection”.
- In the “Enter a Name for the Connection” field, enter a name for the connection.
- In the “Select a Modem” field, select “Cellular Line (HSDPA)”, and then tap “Next”.
- Enter the access point name provided by the cellular service provider, and tap “Next”.
- Enter the username and password and tap “Finish”.

Internet Explorer

Internet Explorer can be used to view Webpages in the following ways:

- Connect to an ISP or network and browse the Web. To do this, a connection must be created.
- During synchronization with a computer, download links and mobile favorites that are stored in the Mobile Favorites subfolder in Internet Explorer on the computer. While connected to an ISP or network, the device can download files and programs from the Internet or an intranet.
- Tap:  /Internet Explorer. The Internet Explorer Mobile home page appears.

Browsing the Internet

- Tap:  /Internet Explorer.
- Tap the “Favorites” soft key to display the Favorites list.
- Tap the desired page to view.
- To visit webpages not include in “Favorites”, enter a web address in the address bar at the top of the screen and tap: , or tap the arrow to choose from a previously entered address.



Windows Live Messenger

Windows Live Messenger provides practically instant access to up to date MSN Hotmail Inbox, Messenger Contacts list, and options for customizing the Messenger experience. Windows Live requires an internet connection, either a MSN Hotmail account, an MSN Messenger account or a Windows passport account.

Features of Windows Live Messenger include:

- MSN Hotmail
 - Read, write, and send email. Delete email and manage Hotmail folders.
- MSN Messenger
 - Send and receive instant messages.
 - Check which contacts are online.
 - Subscribe to status updates for selected contacts.
 - Synchronize the Windows Live contacts, Hotmail inbox, and MSN Messenger to the device.

Setting up Windows Live

- Tap:  /Windows Live to access program
- Tap “Sign into Windows Live”
- Tap “Accept”
- Follow the onscreen instructions to complete the setup


Signing into Messenger

Before signing into Messenger, Windows Live must be signed into first.

- Tap  /Messenger to access the program
- Tap “Sign In”

Windows Media Player

Windows Media Player can be used to play digital audio or video stored on the device, on a network, or on a website. Supported formats are Windows Media or MP3 format (including files with the extensions: .asf, .wma, .wmv, and .mp3) Microsoft Windows Media Player on a desktop computer can be used to copy digital audio and video files to the device.

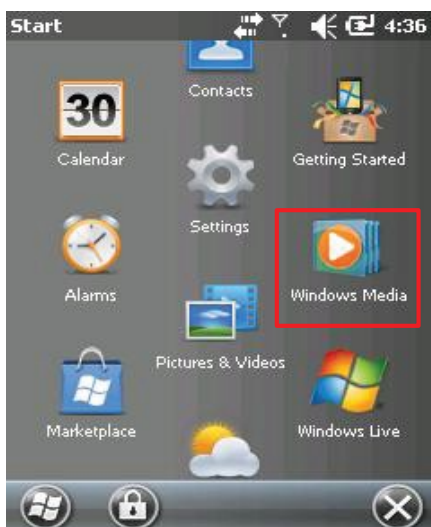

Pictures & Videos

Features of Pictures & Videos includes:

- Viewing pictures and video clips
- Sending pictures and videos to others
- Setting a picture as the background on the Home screen
- Playing a slideshow
- Editing pictures



Viewing Pictures & Videos

- To view pictures or video stored on a storage card, tap: /Pictures & Videos.
- By default, the program displays thumbnails of the pictures and videos in the “My Pictures” folder, within the “My Documents” folder on the device.
- Thumbnails of pictures and videos appear on the screen. Tap one of them to view in full screen.

Camera



Taking Pictures

- To start the program, press the camera button on the device or tap: /Pictures & Videos/ Camera. The camera screen will appear.
- Aim the camera lens at the subject. Press the camera button halfway for automatic focusing. A white frame will appear. Wait until the color of the frame turns green indicating that the subject is in focus.
- Press the camera button fully to take the picture.
- The taken picture will be displayed on the screen. Tap the screen or press the camera button to go back to the camera screen.
- If the picture is not chosen to be deleted after it was taken, the picture is saved to the pre-selected storage location.

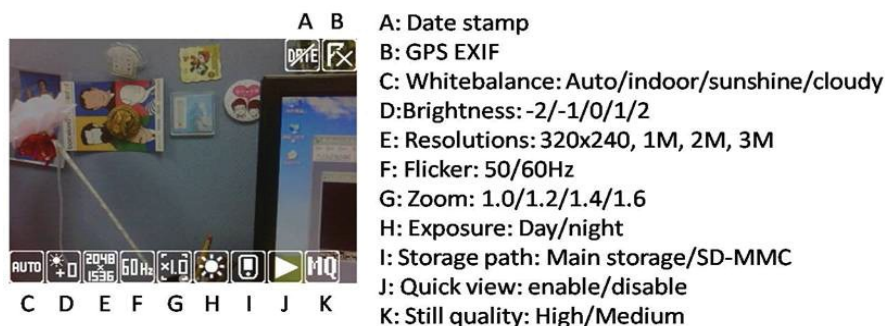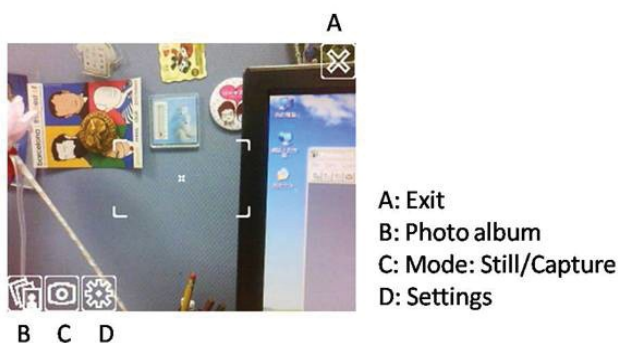

Recording Video Clips

- To start the program, press the camera button or tap: /Programs/Pictures & Videos/Camera.
- Tap the “/” at left corner of the screen to switch between camera and video modes.
- Press the camera button to start recording.
- To stop recording, press the camera button.
- The video clip is saved to the pre-selected storage location. To view the video clip, tap “Thumbnails”.

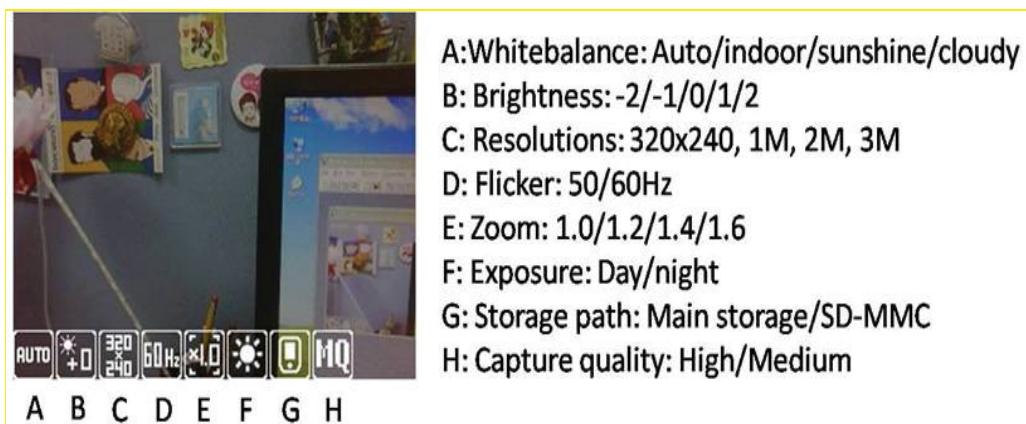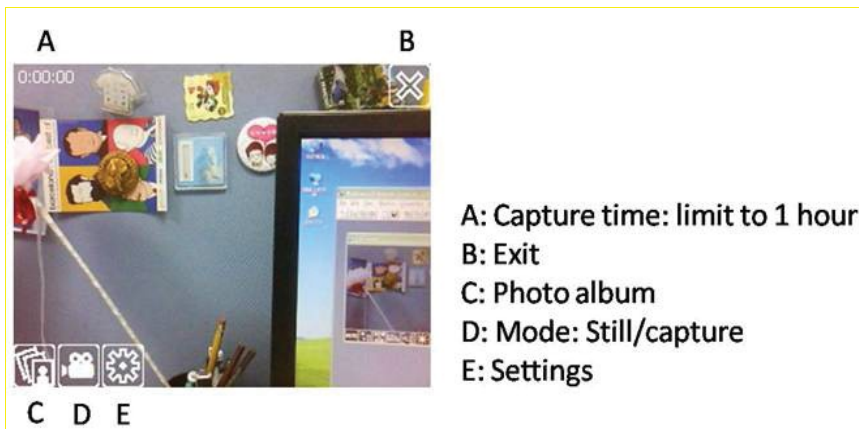

Geotagging

- This picture shows you the user interface of the Geo Camera. Tap the “Set up” item on the bottom of the screen.



- To enable the coordinate and date marks, tap the upper right icons. The upper left icon (flag) shows the GPS position fixed or not.



- To enable the coordinate and date marks, tap the upper right icons. The upper left icon (flag) shows the GPS position fixed or not.



- To check coordinates from BAP Forge series unit, the coordinate and date marks will show on the upper left corner of the photo.



- To check the coordinates from PC/NB, copy the file from BAP Forge series to PC/NB and right click on the file. Select “Content” to check more information.



2012/02/12 16:52:20
N24.978471 E121.548013



GPS

Latitude	25;37;50.399999999994236
Longitude	121;54;47.99999999999829
Altitude	37

Chapter 6

Getting Connected

Types of Connections

The device can connect to the Internet, a computer, and to other devices and services. Using Cellular Connection (Select model only) Model with 3.5G connection function, allow the device to access the Internet via the mobile phone service network.

Setting up a Cellular (HSDPA) Connection

HSDPA service requires a subscription with a mobile phone service network operator. In most cases, the cellular (HSDPA) connection will be preconfigured by the cellular service provider and does not need to be setup or changed.

System	About To show the hardware information and to define the device name for identifying itself to other computers.
	Backlight To adjust the brightness level and power saving options.
	Certificates To establish personal identification or the identification of other computers. Establishing a personal identification of the device and other computers prevents unauthorized users from accessing the device and information on the device.
	Customer Feedback To send personal feedback to Microsoft regarding the Windows Mobile
	Encryption To encrypt files on the storage card.
	Error Reporting To enable or disable error reporting to Windows Mobile technical support group.
	External GPS To configure the GPS hardware settings.
	Managed Programs To show the installation history of managed programs.
	Memory To view the system memory or the memory of any installed storage card and to manually stop a program if it becomes unstable.
	Power To show the remaining battery power and to set battery power settings.
	Regional Settings To specify the region and the local number, currency, time, and date.
	Remove Programs To remove programs.
	Screen To set the orientation of the screen to portrait or landscape. To adjust the touch screen for accurate screen taps. To adjust the text size.
	System Information To view system information.
	Task Manager To view or perform task management of programs.

Searching and Organizing Information

The “Search” feature on the device helps quickly locate information.

To Search for a file:

- Tap “Search Phone”, enter the file name, select data type, and tap “Search” to start the search.
- File Explorer can also be used to find files on the device and to organize these files into folders. Tap:  /File Explorer
- Files can be moved in File Explorer by tapping and holding the item. Tap “Cut” or “Copy” on the shortcut menu, browse to the new location, and tap “Paste”.

Remote Desktop

Remote Desktop allows the device to log onto a Windows Terminal Server and use the programs installed on the server.

- Access to a remote computer requires that the computer have Terminal Services or Remote Desktop installed.
- To connect to a remote computer:
 - o Tap  /Remote Desktop Mobile
 - o Select the computer. Enter the username, password, and domain
 - o Tap “Connect”

Setting up a Dial-up Connection

Depending on the wireless service provider, dial up connections may or may not be supported. With dial up, the service provider gives a phone number that connects the device to the Internet.

- Tap /Settings/Connections/Connections
- In either group, tap “Add a new modem connection”
- In the “Enter a name for the connection” field, enter a name for the connection
- In the “Select a modem” field, select “Cellular Line”, and then tap “Next”
- Enter the phone number provided by the service provider, and tap “Next”
- Enter the username and password, and tap “Finish”

Using a Wireless Network

The device has a built-in wireless network module. If the device is within a wireless LAN (WLAN) environment, it can connect to the network without any cables.

Switching On or Off the Wi-Fi Radio

By default, the Wi-Fi radio is turned off. To turn on or off the Wi-Fi radio:

- Tap the Wi-Fi icon on the Home screen to access Wireless Manager.
- Tap the Wi-Fi box to change the Wi-Fi radio status from Off to Available.

When the Wi-Fi radio is on, the Wi-Fi radio status on the Home screen will be displayed as Available. To turn off the Wi-Fi radio, follow the above procedure, but tap the Wi-Fi box to change the Wi-Fi radio status from Available to Off. The Wi-Fi radio status on the Home screen will be displayed as Off.

- Turn on the Wi-Fi radio.
- Tap Menu/Wi-Fi Settings to open the Wireless Networks Configuration screen. By default, the device will automatically detect available wireless networks.
- If more than one network is detected, the screen will display a network list. Tap the desired network and follow the procedure to configure the wireless network.
- If the selected network requires a network key, enter the key and tap Next/Finish on the screen.
- End the Wi-Fi connection by switching off its radio.



- Search for a network to connect to by tapping:
 /Settings/Connections/Wi-Fi/Search Networks
- Once connected to a network, a shortcut is created on Settings. To change the network settings, tap: Settings/Connections/Wi-Fi. Tap the desired network and change the settings.
- Leaving the radio on will drain the battery power at quicker rate.

Using Bluetooth

BAP does not guarantee that all Bluetooth headsets/devices from all manufacturers are compatible with the device. The device incorporates Bluetooth capability. Bluetooth technology is a short-range (approximately 10m or 30ft) wireless communications technology.

Bluetooth technology features the ability to do the following:

- Beam information, such as files, tasks, contacts, etc. to other Bluetooth supported devices.
- Connect the device to a Bluetooth enabled phone to be used as a modem. When the device is connected to another device or computer, the device can locate and use the services available on the other device or computer.

Switching On or Off the Bluetooth

By default, the radio is turned off. To turn on Bluetooth, do the following:

- Tap the Wireless Manager section on the Home screen.
- Tap the Bluetooth box to change the Bluetooth radio status from Off to On.
- For other devices with Bluetooth capabilities to detect the device and attempt to beam information to it, establish a connection, or use a Bluetooth service, tap:  /Setting/Bluetooth Mode/Make this device visible to other devices.
- To turn off the Bluetooth radio, follow the above procedure, but tap the Bluetooth box to change the Bluetooth radio from On or Visible to Off. The Bluetooth radio status on the Home screen will be displayed as Off.
- Leaving the radio on will drain the battery power more quickly.



☒ Turn on Bluetooth


☒ Make this device visible to other devices

To connect to a device, click on the Devices tab below.



Sending Files Via Bluetooth

- Turn on the Bluetooth radio.
- Make sure that the device and the device that is receiving the information are within close range and that the device is discoverable.
- From the program, tap and hold the desired item.
- Tap “Beam File” in the shortcut menu.
- The device will search for other devices with Bluetooth capabilities within close range, and will display them in the list. Tap the desired destination device.
- Files are saved automatically before they are beamed. If a Word document or Excel workbook was created on a computer, unsupported content and formatting may be lost when the files are saved.

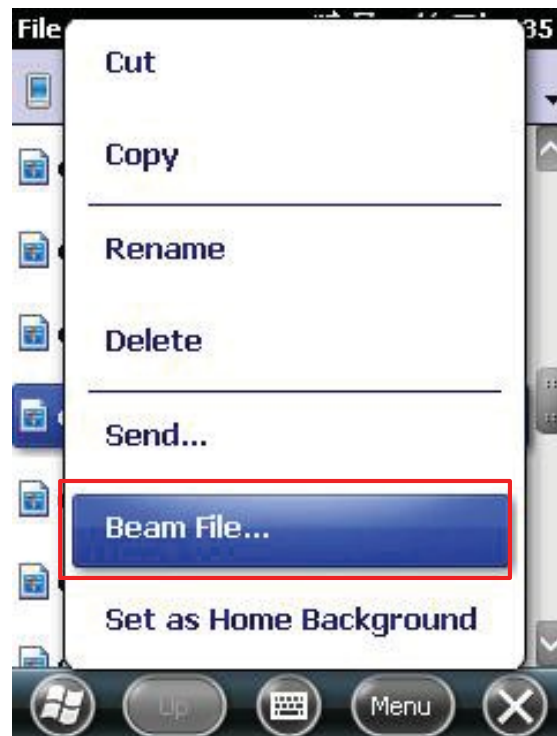

Receiving Files Via Bluetooth

- Make sure that “Make this device visible to other devices” in Bluetooth settings is selected.
- Make sure that the device and the destination device are within close range and that the device is discoverable.
- When prompted to receive an incoming beam, tap “Yes” to receive.

Creating a Bluetooth Partnership

A Bluetooth partnership is a connection that allows for secure information exchange via Bluetooth technology. When a partnership between two devices is created, the devices do not need to be discoverable for secure information exchange. A matching passkey is required on both devices to create a partnership. A Bluetooth partnership will work as long as the Bluetooth function is turned on.

- Turn both devices, set them to discoverable, and place them in close range.
- Tap:  /Settings/Bluetooth/Devices/Add new device.
- The device will search for other devices with Bluetooth capabilities and display them in the list.

Chapter 7

GeoAssist Software

Starting GeoAssist


GeoAssist is a GPS utility that allows the end user to view the status of the GPS and, depending on the version, allows the user to configure the GPS and optimize it for the environment for which it will be used. This instruction guide will show you all of the features and their application. The versions of GeoAssist that are available are Lite (L), Standard (S), and Premium (P).

Versions	Lite Edition	Standard Edition	Premium Edition
General			
GPS Information	✓	✓	✓
Satellites Strength	✓	✓	✓
Satellites Information	✓	✓	✓
Coordinate System Transfer		✓	✓
Coordinate System Plug-in		✓	✓
Optional NMEA Message		✓	✓
GPS Port Configuration	✓	✓	✓
Power Management		✓	✓
Profiling			
Canopy Environment		✓	✓
Precise Point Positioning			✓
Link Mode			
Autonomous	✓	✓	✓
SBAS		✓	✓
Network DGPS			✓
Data Log			
NMEA Data Log			✓
Raw Data Log			✓

GeoAssist Settings

GPS Tab


- The GPS Tab allows you to setup the connection settings for the GPS, Start/Stop the GPS communications, as well as Exit the program.
- The GPS Settings for the Forge handheld should be set to use COM 9 as the communications port and the baud rate should be set to 9600.
- Next, set the additional NMEA sentences you would like to have enabled.
- The GST string reports the GPS Pseudo-range Error (Noise) Statistics. When satisfied, press the “Apply” button.

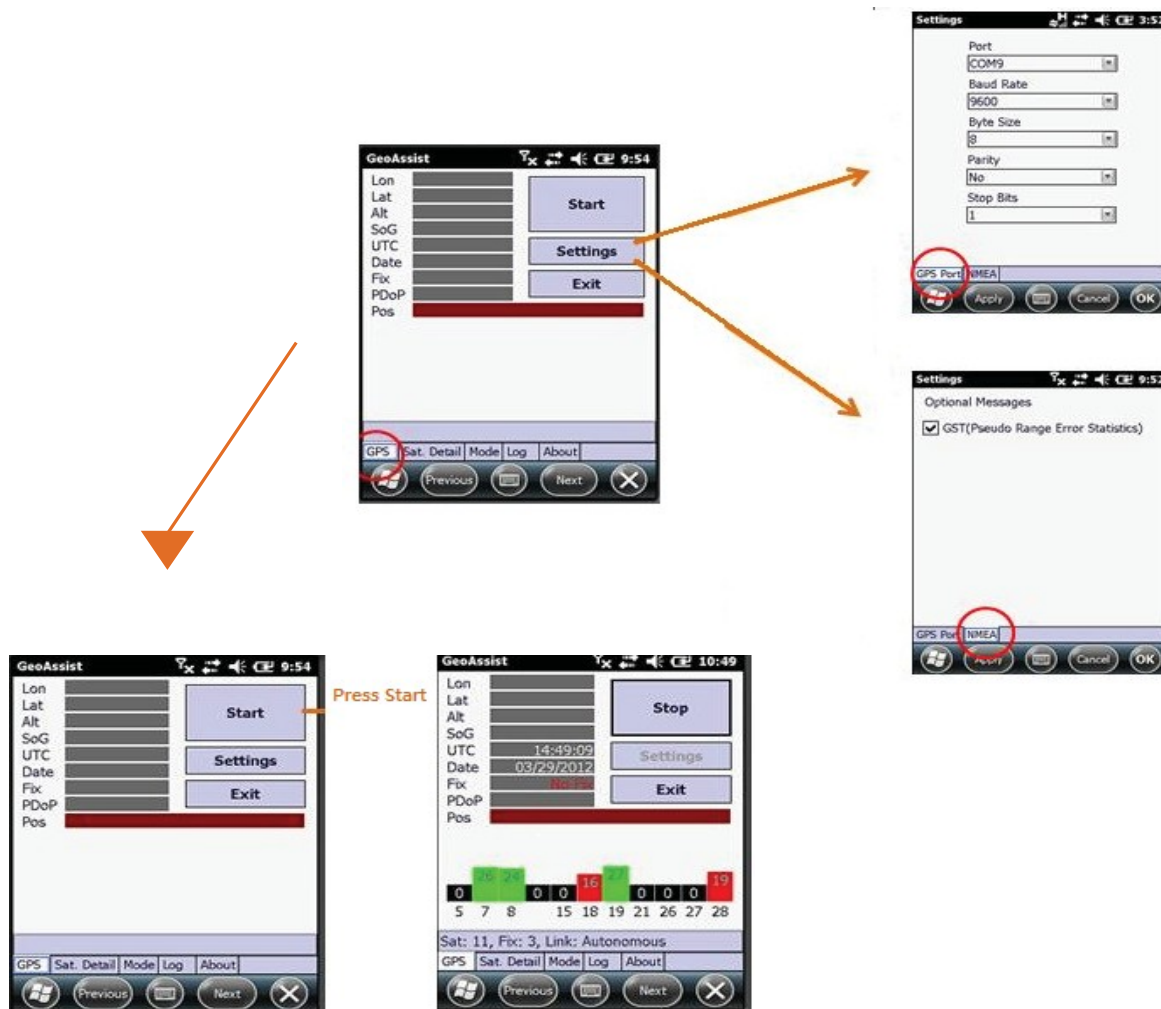

Satellite Detail Tab

The Satellite Detail tab (L,S,P) gives you information regarding each satellite being used.

- PRN: Pseudo-Random Noise (unique identifier for each satellite)
- SNR: Signal to Noise Ratio
- Active: Used in Position – True/False
- Azimuth: Position in the sky from True North
- Elevation: Elevation of satellite above the horizon

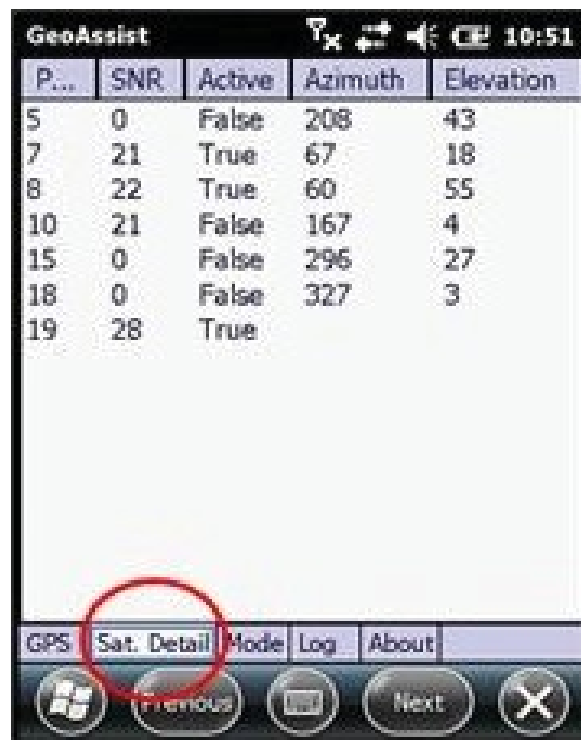

P...	SNR	Active	Azimuth	Elevation
5	0	False	208	43
7	21	True	67	18
8	22	True	60	55
10	21	False	167	4
15	0	False	296	27
18	0	False	327	3
19	28	True		

GPS Sat. Detail Mode Log About

Previous Next

Use Mode Tab

Link Mode: Autonomous (L,S,P)

- Default (L,S,P) – offers no enhanced settings or filter algorithms; Default mode in Lite version
- Precise Point Positioning (P) – Precision, Open Sky
- For Canopy Environments (S,P) – Precision

High-Multipath Environments

SBAS (P)

SBAS is enabled by default to automatically (auto-scan) locate the SBAS for the local position. The GeoAssist Premium version gives you the following control over SBAS:

- Subsystem (P):
 - o Disable – Turn SBAS off
 - o Enable – Turn SBAS on




PRN Codes (P)

Choose the SBAS that best fits your needs.

- Press apply when ready
- In order for “Apply” to be active, the GPS must be started.

Network DGPS (P)

- Host: Enter your host name IP address
- Port: Enter the port given by provider
- User ID: Enter your User ID
- Password: Enter your password
- Advanced – Some NTRIP servers require the GGA string in order to process the correction. Here you can set the location from where the GGA string is set.
- When the settings are correct, press the “Connect” button

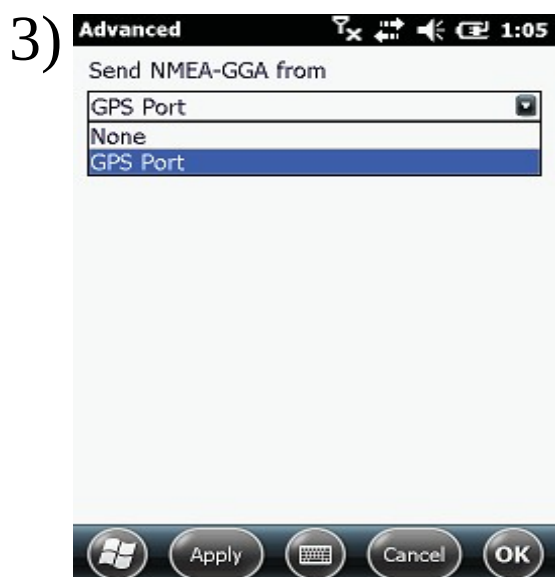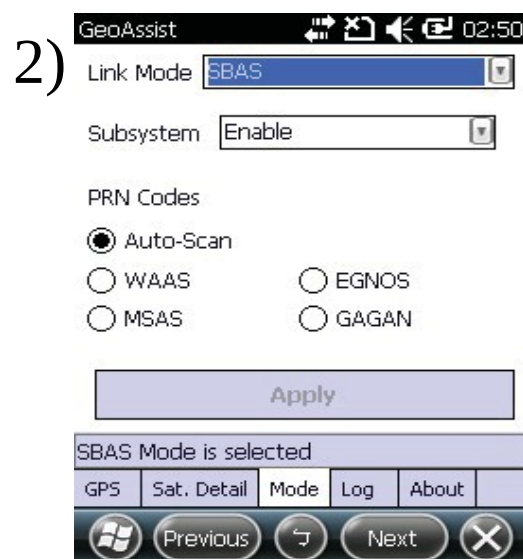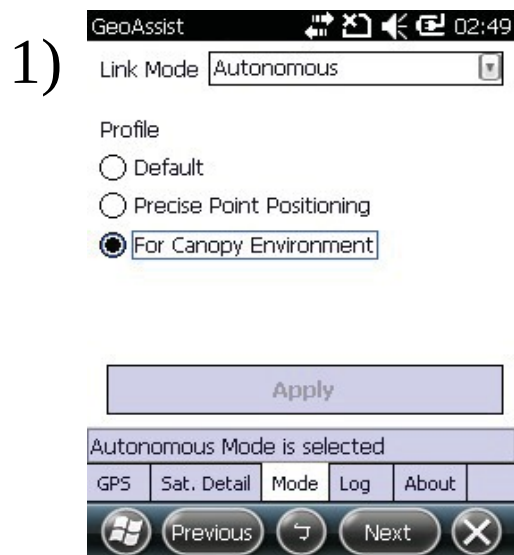

Log Tab

- The Log Tab (P) gives you the ability to store NMEA data in a .nmea file.
- This will not store feature attribute or value data, just raw .nmea string from the GPS receiver.
- Choose a storage location, then press “Start”. When you are finished, press “Stop”.



About Tab

The “About Tab” validates your license edition as well as version.



Chapter 8

Recommended Settings

GPS Settings and Best Practices

- Starting the GPS: Open GeoAssist and start the GPS. Choose the “Mode” tab and select the mode for which you want to use the GPS. Leave GeoAssist running while in use and collecting data.
- GPS COM Port: COM 9
- GPS Baud Rate: 9600
- While in “Canopy” mode, it is best to walk directly to target and stop to collect data. Wandering around target or moving the unit aimlessly may cause inaccurate data.
- If GPS performance is slow, reset the handheld.

Handheld and Best Practices

- Begin each day by resetting the handheld. This is normal practice for most devices and will help with performance.
- For best results and when possible, charge the device via the provided A/C wall charger or desktop battery charger. Charging via the auto adapter or USB may take the unit longer to reach a full charge.

Chapter 9

Troubleshooting & Maintenance

Resetting Your Device

If the device stops responding, or appears to be “frozen” or is “locked up”, the device may need resetting.



Restoring Device to Factory Settings

The device can be restored back to its factory default state by clearing the memory from the device. Restoring the device back to its factory default state should be done in the following cases:

- When the device does not respond after being restarted.
- When the password is forgotten.
- Clearing the memory deletes all data, files, system settings, and additional programs that were installed or synchronized.
- Back up data on a computer, storage media, or another device before restoring to factory default state. Regular back-up of data ensures data integrity during emergency or accidental situations.

To clear the memory from the device, proceed with the following:

- Turn off the system
- Press F1 soft key, F2 soft key and power button simultaneously
- Release all the keys. A “Hive Clean” message should appear
- Press “Yes”

Troubleshooting

If a problem occurs that cannot be solved, contact the dealer for assistance.

Problem	Solution
Power does not switch on when using battery power.	The remaining battery power may be too low to run the device. Charge the battery for 20 minutes before use.
Screen responds slowly.	Make sure that the device is not running out of battery power. If the problem still persists, restart the device.
Screen freezes.	Restart the device.
Cannot establish a connection with a computer via USB.	Make sure that the device and the computer are both switched on before trying to establish a connection.
	Make sure that the cable is securely plugged into the USB port on the computer and on the device. Connect the USB cable directly to the computer. Do not run the cable through a USB hub.

In some specific cases, the device may experience connection problems when it is connected to a Windows computer running ActiveSync. To resolve the problems, please tap:  /Settings/Connections/USB to PC/Enable advanced network functionality.

Problem	Solution
A warning message of not enough memory appears.	Delete unneeded files.
	Remove unneeded programs.
	Delete all files and clear history in Internet Explorer.
	Stop programs that are not being currently used. To check the state of active programs, tap:  /Settings /System/Task Manager. To stop the program by tapping End Task.
	Restart the device.
	Move the data/file to the storage card using file explorer.
	Move Email attachments to storage card.

Caring for Your Device

- Keep the device away from excessive moisture and extreme temperatures.
- Avoid exposing the device to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of the device or drop objects on the device.
- Do not drop the device or subject it to severe shock.
- Do not expose the device to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage the device. In the event of moisture condensation, allow the device to dry out completely before next use.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean the device with it powered on. Use a soft, lint-free cloth to wipe the screen and exterior of the device. Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to the device. Disassembly, modification, or any attempt at repair could cause damage to the device and may even cause bodily or property damage. Disassembly or modification of the device voids the warranty of the device.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the device, its parts or its accessories.

Chapter 10

Safety Precautions

- Prolonged listening of music at maximum volume can damage the ears.
- The use of headphones other than those recommended/supplied can cause hearing impairment due to excessive sound pressure.

About Charging

- Use only the A/C adapter supplied with your device. Use of another A/C adapter will result in malfunction and/or danger.
- Use only the car charger supplied by the manufacturer. Use of another type of car charger will result in malfunction and/or danger.
- Use a specified cradle approved by the manufacturer.
- Use a specified battery.

About the Charger

- Do not use the charger in a high moisture environment. Never touch the charger with wet hands, feet or any other body part.
- Allow adequate ventilation around the charger when using it to operate the device or charge the battery. Do not cover the charger with paper or other objects that will reduce cooling. Do not use the charger while it is inside a carrying case. Connect the charger to a proper power source.
- If damaged, replace the charger with a manufacturer's approved charger. Once damaged, the charger cannot be repaired.

About the Battery

- Use a specified battery approved by the manufacturer.
- Do not place the battery in fire. The battery can burst or explode, releasing hazardous chemicals.
- Dispose or recycle used batteries according to the instructions.
- Only use a replacement battery recommended by the manufacturer.
- The battery should only be used in the specified device.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures; reorient or relocate the receiving antenna.